

# **VSTRUCTION**



Thank you for purchasing Mini lcd thermometer, before operating the unit, please read these instructions thoroughly and retain them for future reference.

#### **⚠** Notice

- 1. The LCD meter is apply for CR 2032 (LCD display), DC 12V (Back light).
- 2. For installation, please follow the steps described in manual. Any damage caused by wrong installation shall be imputed to the users.
- 3.Do not disassemble or change any parts excluding the manual description.
- 4. The interior examination or maintenance should be executed by our professionals.

#### MARK MEANING:

NOTE You could get the installation details from the information behind the mark

↑ Some processes must be followed to avoid the affection caused by wrong installation


**A WARNING!** Some processes must be followed to avoid damages to yourself or the public


A CAUTION! Some processes must be followed to avoid the damage to the vehicle.



### 1-1 Accessory



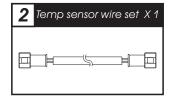

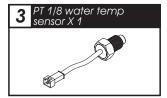








NOTE Please contact the local distributor if the items you open are not the same, with the above-listed one.


M14


M16.M18

#### **1-2** Option accessory



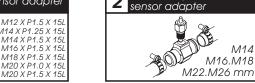


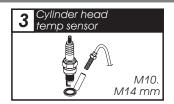


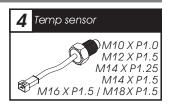

NOTE Some of the option accessories may not sell. For the details, please contact the local distributor.

#### 2-1 Wiring installation instructions

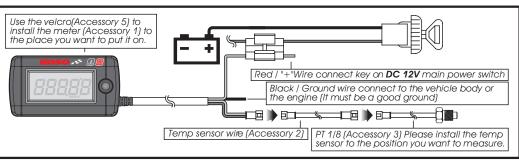

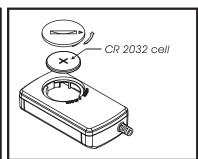

**2-2** Replacing the cell for this product

# 3 Instruction of function



Display range: 0~250°C (32~482°F) · Display unit: 0.1°C (°F) Temperature

OMAX recall (Resettable) Display range: 0~250°C (32~482°F) °C \ °F ○Temperature unit

Back light DC 12V Battery type (LCD display) CR 2032

Around 430 hours Battery life time

■Effective temperature range  $-10 \sim +60^{\circ}$ C

Water proost JIS D 0203 S2

•Meter size W61.7 X L33.7 X H15.6 mm

Meter weight Around 30 g

**NOTE** Design and specifications are subject to change without notice!

## 4-1 Turn ON/OFF the meter



To turn on the meter, please press down the button for 3 seconds and then it will enter the



The meter is off.



In main screen, press down the button for 3 seconds and then the meterwill be turned

# **4-2** The top temperature record and reset



In main screen, press the button one time to enter the top temperature record screen. EX. Now the temperature is 28.5°C.

### **∆WARNING!**

Please don't check the record during riding to avoid the accident.



In the top temperature record screen, please press down the button for 3 seconds to reset the record.

EX. Now the top temperature record is 110.0°C

**NOTE** The top temperature record range:  $0 \sim 250^{\circ}\text{C}$  ( $32 \sim 482^{\circ}\text{F}$ )



In top temperature record screen, press the button 2 times to back to the main screen. EX. Now the temperature is 28.5°C.

**NOTE** The max record will always display the top temperature it reaches, so it won't be zero.

The main screen.



### **4-3** The temperature unit



In main screen, press the button 2 times to enter the temperature unit setting screen. EX. Now the temperature is 28.5°C.



The main screen. EX. Now the temperature is 83.3°F.



In the setting screen, press down the button for 3 seconds to switch the temperature unit between "C & F.

EX. The original setting is  $^{\circ}$ C.

 $ilde{\wedge}$  Now the  $^{\circ}$ C is flashing.

**NOTE** The setting range is between °C & °F.

**NOTE** If you don't change the setting in 10 seconds, the meter will backto the main screen automatically.

#### 5 Trouble shooting

The following situation do not indicate malfunction of the meter. Please check the following before taking it in for repair.

#### The back light doesn't work when the power is on.

#### Check item

- The power doesn't supply to the meter. →Please make sure the wiring is connected. The wiring and fuse are not broken
- →The battery is broken or the battery is too old to supply enough power (DC 9V) to make the back light work.

#### Check item

The meter shows wrong information.

Temp does not appear or appear incorrectly.

- ●Please check the battery (CR 2032) power, and make sure it is over DC 2.85V.
- Please check the sensor. →Does the wiring break or falling off?

if still can't solve the problems according to the steps above, please contact with distributors or us.